ÖLBOX® AIRE

Pneumatic pump

Multinational Patents in USA., JAPAN, GERMANY, UK, AUSTRALIA, TAIWAN & CHINA.

OA-705 OA-707 OA-719

APPLICATION

Our Oil/Fluid Extractor is designed for extracting all types of engine, transmission and lubricating oils from cars, motorcycles, marine engines, stationary engines, trucks, RV's, lawn mowers, agricultural vehicles and industrial machinery. Also for siphoning all kinds of non corrosive liquids, such as water from the aquarium, etc.

OPERATING INSTRUCTIONS

1.Remove the oil dipstick.

2. Select and insert the appropriate diameter extracting tube into the dipstick hole till it reaches the bottom of the oil pan, connect the main suction tube to the unit and to the extracting tube.

3.Ensure that the “open & close valve lever” is in the “close” position.
Connect the air compressor air line hose to the quick coupler.

4. After all the oil has been extracted, turn the lever to the”close” position and disconnect the air line hose from the unit. Remove the extracting tube from the dipstick tube (refit the oil dipstick).
Remove the main suction tube from the unit. Slowly pour the used oil into a suitable container and dispose of in an appropriate manner.

IMPORTANT

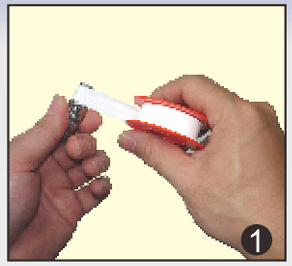

◎ Before use, apply thread tape to the quick coupler before fitting the coupler to the unit.

◎ Tubing set holder.

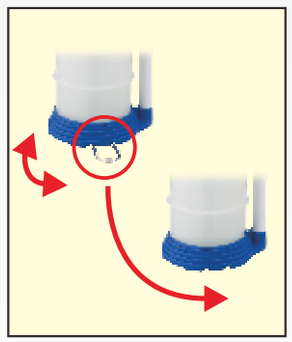

◎ Footstep

Note:

Retain these instructions for future reference.

Important Note:

Air line working pressure,90PSI.
Then turn the lever to the “open” position.
The unit will then automatically start to extract the oil.

Illustrations

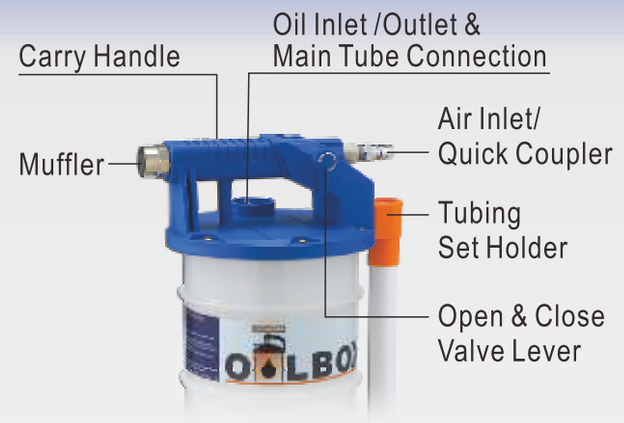

Ø 9.8mm / Ø 6.7mm / Ø 5.8mm OD

WARNING:

1. Do not use the unit to extract, siphon or store dangerous chemicals, poisons, acids, alkalis, solvents or any flammable products.
   If by chance products such as these were used in the unit it must be immediately drained, washed and thoroughly cleaned.
2. If the unit was used to extract salt water, eg. Bilge water, thoroughly flush and wash the unit with fresh, clean water.
3. The unit is not designed for long term storage of oil, or other fluids, the used oil must be poured into a suitable container and disposed of in an appropriate manner.
4. Do not store either the unit or suction tubes near open flames, in areas of high temperatures, direct sunlight, rain or snow.
5. Do not dismantle, tamper with or adapt the unit for any other purpose than what it was originally intended for.
6. Do not drop, throw or misuse the unit.

Copyright © 2011 Ölbox GmbH. All rights reserved.